

## USAGE

BEFORE THE FIRST USE, FULLY CHARGE THE DEVICE WITH A PIN CHARGER FOR AN HOUR.

THE TOY IS CONTROLLED BY TWO BUTTONS:  
TOP BUTTON - SHORT PRESSES SWITCH THE STIMULATION MODE  
LOWER BUTTON - SHORT PRESS TURNS THE DEVICE ON AND OFF

THE DEVICE HAS AN IPX6 WATERPROOF AND IS ABLE TO RESIST HIGH-PRESSURE, HEAVY SPRAYS OF WATER.

USE LUBRICANTS TO MAKE THE PENETRATION PROCESS MORE PLEASANT AND COMFORTABLE

## STORAGE

KEEP THE TOY OUT OF THE REACH OF CHILDREN IN A SPECIAL BAG (INCLUDED IN THE KIT). REMAINING IN THE BAG, THE TOY IS PROTECTED FROM DIRECT SUNLIGHT, DUST, AND ALSO NOT SUBJECT TO EXTERNAL DAMAGE IN THE FORM OF SCRATCHES AND RUBBING OF THE DEVICE.

## CARE

BE SURE TO WASH THE TOY UNDER WARM WATER AND TREAT IT WITH A SPECIAL TOY-CLEANER BEFORE AND AFTER EACH USE.

MANUAL



RECHARGEABLE  
VIBRATORS