

USAGE

ROLL OVER THE SKIN OF THE
ARMS, BACK, NECK, LEGS AND
SOLES AND GIVE A GENTLE
STIMULATION

IF UNPLEASANT SENSATIONS
AND DISCOMFORT OCCUR,
IMMEDIATELY STOP USING THE
ACCESSORY.

USE THE ACCESSORY ONLY
WITH MUTUAL CONSENT.

STORAGE

KEEP THE TOY OUT OF THE
REACH OF CHILDREN.
AVOID CREASES AND
KINKS OF ACCESSORIES

CARE

HANDLE THE TOY
CAREFULLY TO AVOID
DAMAGING IT

MANUAL
PARTY
HARD
WARTENBERG WHEEL