

USAGE

USE AN ANAL PLUG WITH A SILICONE LUBRICANT TO MAKE THE PROCESS THE MOST COMFORTABLE AND ENJOYABLE.

IF YOU HAVE A VIBRATING TOY, FIRST REMOVE THE FUSE FROM THE VIBRATING BULLET, WHICH IS LOCATED ON THE BATTERY CONTACT UNDER THE UNSCREWING COVER. VIBROBULLETS OF ANAL PLUGS ASSUME ONE VIBRATION MODE, THE SWITCHING ON AND OFF OF WHICH IS REGULATED BY SIMPLY PRESSING THE BUTTON AT THE BASE OF THE BULLET.

STORAGE

KEEP THE TOY IN A BAG, OUT OF THE REACH OF CHILDREN. REMAINING IN THE BAG, THE TOY IS PROTECTED FROM DIRECT SUNLIGHT, DUST, AND IS NOT SUBJECT TO EXTERNAL DAMAGE IN THE FORM OF SCRATCHES AND RUBBING OF THE DEVICE.

CARE

BEFORE THE FIRST USE BOIL THE TOY (IF THERE IS A VIBROBULLET - REMOVE IT), DRYING WITH A PAPER TOWEL. TREAT THE TOY WITH A SPECIAL TOY-CLINER WITH ANTISEPTIC PROPERTIES FOR ADDITIONAL CARE

AFTER EACH USE WASH THE TOY IN WARM WATER WITH SOAP (IF THERE IS A VIBROBULLET - REMOVE IT)

MANUAL

FIRST
time