

USAGE

BEFORE THE FIRST USE, FULLY CHARGE THE DEVICE WITH A CHARGER FOR AN HOUR.

THE TOY IS CONTROLLED BY PRESSING THE BUTTON ON ITS FRONT SIDE. A LONG PRESS (3 SECONDS) OF THE BUTTON TURNS THE DEVICE ON AND OFF, AND SHORT PRESSES SWITCH THE STIMULATION MODES.

HEATING VIBRATORS HAVE TWO BUTTONS:

TOP BUTTON - SHORT PRESSES TURN THE HEATING

LOWER BUTTON - A LONG PRESS (2 SECONDS) OF THE BUTTON TURNS THE DEVICE ON AND OFF, AND SHORT PRESSES SWITCH THE STIMULATION MODES.

THE DEVICE HAS AN IPX7 WATERPROOF AND IS ABLE TO WORK UNDERWATER. IT IS NOT RECOMMENDED TO USE THE TOY AT A DEPTH OF MORE THAN ONE METER.

STORAGE

KEEP THE TOY OUT OF THE REACH OF CHILDREN IN A SPECIAL BAG (INCLUDED IN THE KIT). REMAINING IN THE BAG, THE TOY IS PROTECTED FROM DIRECT SUNLIGHT, DUST, AND ALSO NOT SUBJECT TO EXTERNAL DAMAGE IN THE FORM OF SCRATCHES AND RUBBING OF THE DEVICE.

CARE

BE SURE TO WASH THE TOY UNDER WARM WATER AND TREAT IT WITH A SPECIAL TOY-CLEANER BEFORE AND AFTER EACH USE.

MANUAL

SHAPE OF WATER