

# WAND

---

## DASHING WAND

## MANUAL



The device is suitable for body massage, clitoral stimulation, stimulation of external erogenous zones.

Before and after each use clean the toy with soap water and treat it with a special Love Protection Toy cleaner.

The device should be stored in a special satin bag (included), out of the reach of children.

Before the first usage, charge the device to a full charge using the original cable for two hours.

The device is controlled by a button panel located on the front side of the toy.

The power button is located at the bottom of the control panel. Switching on and off is by pressing the button for two seconds. After turning the device on, all its buttons will start to light.

The upper button is for switching the speed modes of the toy.

The center button is for switching the vibration modes

The device is made according to the IPX7 waterproof standard and can work underwater.

It is not recommended to use the toy at a depth of more than one meter.

