

## USAGE

CHARGE THE VAGINAL BALL TO A FULL CHARGE USING A MAGNETIC CHARGER FOR AN HOUR AND A HALF BEFORE FIRST USE.

INSERT TWO AAA BATTERIES (NOT INCLUDED) INTO THE REMOTE CONTROLLER.

THE DEVICE CAN BE CONTROLLED WITH THE CONTROL PANEL ON THE VAGINAL BALL AND THE REMOTE CONTROLLER:

THE VAGINAL BALL IS ABLE TO WORK INDEPENDENTLY OF THE REMOTE CONTROLLER – THE TOY CAN BE TURNED ON BY PRESSING THE POWER BUTTON. SHORT PRESSES ARE SWITCHING VIBRATION MODES.

THE POWER BUTTON ON THE REMOTE CONTROLLER TURNS THE VIBRATING SCREEN ON AND OFF.

THE " + " BUTTON SWITCHES THE VIBRATION MODES.

THE VAGINAL BALL IS ABLE TO RECEIVE SIGNALS FROM THE REMOTE CONTROLLER AT A DISTANCE OF UP TO 8 METERS.

THE DEVICE IS DESIGNED FOR VAGINAL AND CLITORAL STIMULATION. THE VAGINAL BALLS HAVE PULSATING, CIRCULATING AND ROTATING MODES. A SOFT STRAP FOR THE SAFE REMOVAL OF THE TOY IS ATTACHED TO ITS BASE.

## STORAGE

KEEP THE TOY OUT OF THE REACH OF CHILDREN IN A DRY PLACE, PROTECTED FROM DUST AND DIRECT SUNLIGHT.

## MANUAL

# Take it easy

**RECHARGEABLE  
VAGINAL BALLS**

## CARE

BEFORE THE FIRST USE, AS WELL AS BEFORE AND AFTER EACH USE, BE SURE TO WASH THE VAGINAL BALL IN WARM WATER AND TREAT IT WITH A SPECIAL TOY-CLEANER. THE VAGINAL BALL HAS AN IPX7 WATERPROOF, SO IT CAN BE WASHED AND SUBMERGED IN WATER AT A DEPTH OF UP TO 1 METER.

PAY ATTENTION: THE REMOTE CONTROLLER HAS SPLASH-PROOF. DIRECT CONTACT WITH WATER AND ANY OTHER LIQUIDS IS STRICTLY PROHIBITED.