

USAGE

USE AN ANAL PLUG WITH A SILICONE LUBRICANT TO MAKE THE PROCESS THE MOST COMFORTABLE AND ENJOYABLE.

IF YOU HAVE A VIBRATING TOY, BEFORE USING THE TOY, FIRST REMOVE THE FUSE FROM THE VIBRATING BULLET, WHICH IS LOCATED ON THE BATTERY CONTACT UNDER THE UNSCREWING COVER.

VIBROBULLETS OF ANAL PLUGS ASSUME SEVERAL VIBRATION MODES, THE SWITCHING ON AND OFF OF WHICH IS REGULATED BY SIMPLY PRESSING THE BUTTON AT THE BASE OF THE BULLET.

IF YOU HAVE A TOY WITH A COCKRING,

PLACE IT ON THE BASE OF THE ERECT PENIS AND UNDER THE SCROTUM AT THE SAME TIME, STRETCHING THE RING AND PUSHING IT ALONG THE PENIS. THE RING SHOULD BE CONVENIENTLY FIXED WITHOUT ROLLING DOWN AND NOT SQUEEZING THE SCROTUM. IF YOU FEEL DISCOMFORT WHILE USING THE COCK RING - IMMEDIATELY STOP FRICTIONS AND REMOVE IT.

IT IS IMPORTANT NOT TO USE THE RING FOR MORE THAN 30 MINUTES TO AVOID CIRCULATORY DISORDERS.

STORAGE

KEEP THE TOY IN A BAG, OUT OF THE REACH OF CHILDREN. REMAINING IN THE BAG, THE TOY IS PROTECTED FROM DIRECT SUNLIGHT, DUST, AND IS NOT SUBJECT TO EXTERNAL DAMAGE IN THE FORM OF SCRATCHES AND RUBBING OF THE DEVICE.

CARE

BEFORE THE FIRST USE BOIL THE TOY (IF THERE IS A VIBROBULLET - REMOVE IT), DRY WITH A PAPER TOWEL. TREAT THE TOY WITH A SPECIAL TOY-CLINER FOR ADDITIONAL CARE

AFTER EACH USE WASH THE TOY IN WARM WATER WITH SOAP (IF THERE IS A VIBROBULLET - REMOVE IT)

MANUAL SPICE IT UP!