

USAGE

BEFORE USING THE MIMI VIBRATING RING, FIRST REMOVE THE FUSE FROM THE VIBRATING BULLET, WHICH IS LOCATED ON THE BATTERY CONTACT UNDER THE UNSCREWING COVER.

ALL BATTERY-POWERED VIBROBULLETS OF MIMI ANIMALS RINGS ASSUME ONE VIBRATION MODE. THE SWITCHING ON AND OFF OF WHICH IS REGULATED BY SIMPLY PRESSING THE BUTTON AT THE BASE OF THE BULLET.

THE RECHARGEABLE RING IS CONTROLLED BY PRESSING THE BUTTON. A LONG PRESS (3 SECONDS) OF THE BUTTON TURNS THE DEVICE ON AND OFF, AND SHORT PRESSES SWITCH THE STIMULATION MODES.

THE RECHARGEABLE DEVICE HAS AN IPX7 WATERPROOF AND IS ABLE TO WORK UNDERWATER.

PLACE THE RING ON THE BASE OF THE ERECT PENIS. THE RING SHOULD BE CONVENIENTLY FIXED WITHOUT ROLLING DOWN. IF YOU FEEL DISCOMFORT WHILE USING THE COCK RING - IMMEDIATELY STOP FRICTIONS AND REMOVE IT.

IT IS IMPORTANT NOT TO USE THE RING FOR MORE THAN 30 MINUTES TO AVOID CIRCULATORY DISORDERS.

STORAGE

KEEP THE TOY IN A BAG, OUT OF THE REACH OF CHILDREN. REMAINING IN THE BAG, THE TOY IS PROTECTED FROM DIRECT SUNLIGHT, DUST, AND IS NOT SUBJECT TO EXTERNAL DAMAGE IN THE FORM OF SCRATCHES AND RUBBING OF THE DEVICE.

CARE

BEFORE THE FIRST USE, AS WELL AS BEFORE AND AFTER EACH USE, WASH THE TOY UNDER A WARM STREAM OF WATER, DRYING WITH A PAPER TOWEL, HAVING PREVIOUSLY REMOVED THE VIBROBULLETS (IF RINGS ARE BATTERY-POWERED). TREAT THE STIMULATOR WITH A SPECIAL TOY-CLINER WITH ANTISEPTIC PROPERTIES FOR ADDITIONAL CARE.

MANUAL

mimi
animals