CLEANING & STORAGE

The lifespan of the product will be greatly increased with proper maintenance and care.


Please always clean the product before and after each use.


Wash the silicone part with water and soap, or use toy cleaner, rinse with clean water and dry with a towel.

Do not use cleaning substances containing alcohol, petrol or acetone.

Store the product in a dust-free place. Avoid direct sunlight.



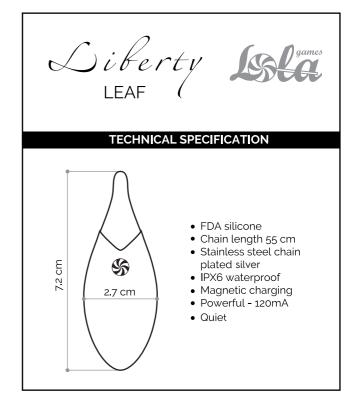

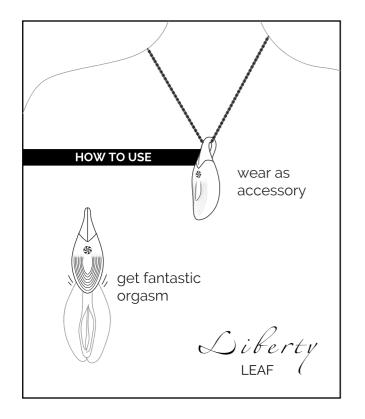

OPERATING INSTRUCTIONS:

Turn ON: Long press the button to activate your product and start vibrating; single click the button to change frequency: from 1 to 10.

Turn OFF: Long press button to turn off your product.

DIRECTION FOR CHARGE

Insert the USB cable into a USB port, connecting magnetic charging.

The LED lights will be flicker to indicate that the product is charging, when it is fully charged, the light will be stop blinking.

DO NOT use the product while charging.

Each charging process lasts for about 45 minutes.

Please try to use the original power cable only and excellent quality USB adapter.