

USAGE

BEFORE THE FIRST USE, FULLY CHARGE THE DEVICE WITH A PLUG-IN CHARGER FOR AN HOUR.

THE DEVICE IS SWITCHED ON AND OFF BY PRESSING THE POWER BUTTON FOR TWO SECONDS.

SHORT BUTTON PRESSES SWITCH THE STIMULATION MODES.

THE DEVICE HAS AN IPX7 WATERPROOF AND IS ABLE TO WORK UNDERWATER. IT IS NOT RECOMMENDED TO USE THE TOY AT A DEPTH OF MORE THAN ONE METER.

STORAGE

KEEP THE STIMULATOR IN A SATIN BAG, OUT OF THE REACH OF CHILDREN. REMAINING IN THE BAG, THE TOY IS PROTECTED FROM DIRECT SUNLIGHT, DUST, AND IS NOT SUBJECT TO EXTERNAL DAMAGE IN THE FORM OF SCRATCHES AND DEVICE RUBBING.

CARE

BE SURE TO WASH THE TOY UNDER WARM WATER AND TREAT IT WITH A SPECIAL TOY-CLEANER BEFORE AND AFTER EACH USE.

MANUAL

Take it easy

FAY VACUUM WAVE
STIMULATOR