

USAGE

CHARGE THE VIBRATING EGG TO A FULL CHARGE USING A MAGNETIC CHARGER FOR AN HOUR AND A HALF BEFORE FIRST USE.
INSERT TWO AAA BATTERIES (NOT INCLUDED) INTO THE REMOTE CONTROLLER.

THE DEVICE CAN BE CONTROLLED WITH THE CONTROL PANEL ON THE VIBRATING EGG AND THE REMOTE CONTROLLER:
THE VIBRATING EGG IS ABLE TO WORK INDEPENDENTLY OF THE REMOTE CONTROLLER – THE TOY CAN BE TURNED ON BY PRESSING THE POWER BUTTON. SHORT PRESSES ARE SWITCHING VIBRATION MODES.

THE POWER BUTTON ON THE REMOTE CONTROLLER TURNS THE VIBRATING SCREEN ON AND OFF.
THE " + " BUTTON SWITCHES THE VIBRATION MODES.

THE VIBRATION EGG IS ABLE TO RECEIVE SIGNALS FROM THE REMOTE CONTROLLER AT A DISTANCE OF UP TO 8 METERS.

THE DEVICE IS DESIGNED FOR VAGINAL AND CLITORAL STIMULATION. A SOFT STRAP FOR THE SAFE REMOVAL OF THE TOY IS ATTACHED TO ITS BASE.

STORAGE

KEEP THE TOY OUT OF THE REACH OF CHILDREN IN A DRY PLACE, PROTECTED FROM DUST AND DIRECT SUNLIGHT.

MANUAL

Take it easy

**RECHARGEABLE
VIBRATING EGG**

CARE

BEFORE THE FIRST USE, AS WELL AS BEFORE AND AFTER EACH USE, BE SURE TO WASH THE VIBRATING EGG IN WARM WATER AND TREAT IT WITH A SPECIAL TOY-CLEANER. THE VIBRATING EGG HAS AN IPX7 WATERPROOF, SO IT CAN BE WASHED AND SUBMERGED IN WATER AT A DEPTH OF UP TO 1 METER.

PAY ATTENTION: THE REMOTE CONTROLLER HAS SPLASH-PROOF. DIRECT CONTACT WITH WATER AND ANY OTHER LIQUIDS IS STRICTLY PROHIBITED.