

USAGE

BEFORE THE FIRST USE, INSERT TWO AAA BATTERIES (NOT INCLUDED) INTO THE COMPARTMENT ON THE BACK OF THE TOY. WHEN THE LID IS PROPERLY CLOSED, THE WORKING MECHANISM OF THE TOY IS PROTECTED FROM SPLASHES.

THE DEVICE IS SWITCHED ON AND OFF BY PRESSING THE POWER BUTTON FOR TWO SECONDS.

SHORT BUTTON PRESSES SWITCH THE STIMULATION MODES.

STORAGE

KEEP THE STIMULATOR IN A SATIN BAG, OUT OF THE REACH OF CHILDREN. REMAINING IN THE BAG, THE TOY IS PROTECTED FROM DIRECT SUNLIGHT, DUST, AND IS NOT SUBJECT TO EXTERNAL DAMAGE IN THE FORM OF SCRATCHES AND DEVICE RUBBING.

CARE

BEFORE THE FIRST USE AND EACH APPLICATION, TREAT THE TOY WITH A SPECIAL TOY-CLEANER WITH ANTISEPTIC PROPERTIES. DO NOT ALLOW DIRECT CONTACT OF WATER ON THE TOY.

MANUAL

Take it easy

ACE VACUUM WAVE
STIMULATOR